



Using the new 2di Email alert system.

Send an email alert if your TV2 sensors detects an unsafe condition is easy with the TView Email Alert software. There are three things you need to insure.

1. Your ThermaViewer must be visible on your network.
2. Your alarm parameters must be set on the TV2
3. Your TView Email software must be setup.
4. ***Autodownloads must be enabled and occurring***

To receive email or instant message alerts you must be able to see your TV2 on your Local Area Network (LAN). This can be accomplished by plugging your monitor into a hub or switch with a CAT5 cable. The TV2 will receive an IP address from your dns. The red X on the network icon in the lower left area of the LCD will disappear. Once this happens look up the IP address on the 'Network Menu' and make a note of it.



(see page 2 for instructions for setting up the email alert)

To setup your email system:

1. Install the TView software onto your desktop computer
 2. Plug the network cable into a LAN connectio and note the IP address assigned by your DNS
 3. Add the TV2 to Tview under the setup tab of Tview.
 4. Setup autodownloads for the TV2.
 5. Set up email alerts
- A. Open TView and click on the 'Setup' tab and then click 'Email Alerts' The email alert setup box will open. (see below)
- B. Check the box at the top of the screen to enable the email alerts.

This is a screenshot of the 'Email Alert Settings' dialog box. The title bar reads 'Email Alert Settings'. At the top, there is a checked checkbox for 'Enable Email Alerts'. Below this, on the left side, are four text input fields: 'Reply-To:', 'Recipients: Comma separated list', 'Subject:', and 'Body:'. On the right side, there is an unchecked checkbox for 'Use SMTP Server', followed by an 'SMTP Server:' text field and a 'Port: 25' text field. Below these are two more unchecked checkboxes: 'Use SSL' and 'Use Default Credentials'. At the bottom right, there are 'Username:' and 'Password:' text fields. At the bottom center, there are three buttons: 'OK', 'Cancel', and 'Send Test Email'.

- C. Fill in the four text fields on the left side of this setting box. (See example below). These are text field. Any information entered into the Subject and Body fields will print on the email you receive when an alert is sent. The Recipients box is where you enter the send-to email addresses. Multiple email address should be separated with a comma (.). To send text alerts enter the email address as specified below.

This is a screenshot of the 'Email Alert Settings' dialog box, identical in layout to the first one but with the input fields filled. The 'Reply-To:' field contains 'rickk@e2di.com'. The 'Recipients:' field contains 'rickk@e2di.com,kimh@e2di.com,joe@2di.com'. The 'Subject:' field contains 'Email alert from the Freezer'. The 'Body:' field contains 'Your freezer that is used to store vaccines is too high or low. This is your alarm notification.' The 'SMTP Server:' field is empty, and the 'Port:' field contains '25'. The 'Username:' and 'Password:' fields are empty. The 'Enable Email Alerts' checkbox is checked, while 'Use SMTP Server', 'Use SSL', and 'Use Default Credentials' are unchecked. The 'OK', 'Cancel', and 'Send Test Email' buttons are at the bottom.



To send text alerts substitute the email address below for the normal email address.

AT&T – 10digitnumber@txt.att.net
Verizon-- 10digitnumber@vtext.com
Alltel -- 10digitnumber@message.alltel.com
Nextel -- 10digitnumber@messaging.nextel.com
Boost -- 10digitnumber@myboostmobile.com
T-Mobile -- 10digitnumber@tomomail.net
US Cellular -- 10digitnumber@email.uscc.net
Sprint PCS -- 10digitnumber@messaging.sprintpcs.com
Virgin Mobile -- 10digitnumber@email.vmobi.com
AT&T – 10digitnumber@txt.att.net

For more information on sending text messages through your carrier: [How to Send & Receive Free Text Messages From the Computer to a Phone | eHow.com](http://www.ehow.com/how_6769401_send-text-messages-computer-phone.html#ixzz2E1p11Bor)
http://www.ehow.com/how_6769401_send-text-messages-computer-phone.html#ixzz2E1p11Bor

- D. Check the box 'Use SMTP server' and enter the rest of the information the same way you would to setup an account in your email system. This is exactly like setting up your email account in outlook or express or windows live or Thunderbird, etc. (example below)

Email Alert Settings

Enable Email Alerts

Reply-To: rickk@e2di.com

Recipients: rickk@e2di.com
Comma separated list

Subject: test 7.0.0.1

Body: test

Use SMTP Server

SMTP Server: e2di.com

Port: 587

Use SSL

Use Default Credentials

Username: textalert@e2di.com

Password: *****

NOTE! Email alerts will only be sent when TView is running!

OK Cancel **Send Test Email**



Send a test email and verify that you receive it at the email addresses you entered in the Recipients box.

6. Set your TView software to autownload the TV2.
 - A. Click on Setup and 'Schedule Download' and choose the TV2 you want to download
 - B. Input a file name, click the sensors you want to download and indicate how often you want a new file created.
7. Set the alarm parameters on the TV2 menu for each of your sensors. Instructions can be found in the Users Guide which came with the TV2 or downloaded from our web site. <https://www.e2di.com/usersguides.html>. (see example below).

Sensor 1
Alarm Enabled
Trigger alarm for 10:00 mm:ss
If temperature is >8.0°C for more than 00:20:00 hh:mm:ss
If teperature is <2.0°C for more than 00:20:00 hh:mm:ss

9. What to do if you can not use your in-house email client or a Gmail account. Two Dimensional Instruments, LLC maintains an email server that you can use if nothing else works. Use the settings below. The password is k69016901

NOTE! Email alerts will only be sent when TView is running!



Note that if an address appears in the TV2 setup area all alerts will be sent to that address and not the default address in the Email Alert Settings area.

Device Type: TV2a

Serial Number: 18100801

Address: 129.65.174.177:80

Device Info: 7.1d.23

Location:

Alert Email:

Sensor Names:

Port 4: