

TV2 Clean Room Monitor

Users Guide & Installation Manual



Congratulations!

Your TV2 Clean Room monitor with easy touch display will provide years of reliable service, collecting, storing and displaying data while monitoring temperature, humidity and even pressure. Although it is a highly sophisticated instrument it is easy to install and use.

The Display:

The LCD display is a full color Easy-Touch display. With a simple touch you can navigate to the menu screens, a logged data chart for each sensor, zoom in or out of a chart to see more data, set the alarms, silence an alarm, set the data storage rate, etc...

Sensor Accuracy:

The TV2 logs and displays information it receives from its sensors. The accuracy of that data is superb temperature sensor is $\pm 0.3^{\circ}\text{C}$. The humidity sensors is $\pm 3.0\%$ and the pressure sensor is accurate to $.007''\text{WG}$.

Powering the TV2 Display:

The TV2 Clean Room display is powered via a USB cable, which can be plugged into a computer or the wall plug. A rechargeable non-user serviceable lithium batter is installed in the TV2 which will power it at least 72 hours if USB power is missing.

Operating on batteries:

If normal power fails and the 'Missing AC alarm' is active, the internal buzzer will beep once a second for 60 seconds, sleep for 10 minutes, then beep every second for another 60 seconds, etc.. At the same time the TV2 Clean Room Monitor will enter a light sleep mode to conserve battery power. Once power is restored the display will wake up.

Internal Alarm & Relay:

The TV2 has a dry contact normally open (N/O) relay and piezo buzzer, which are activated when an alarm occurs. (See appendix for alarm types)

Factory Service and Returns:

Please call for a return authorization (RA) prior to sending any instrument for repairs. (see page 39 for warranty information).



Table of Contents

Component and Packing List	pg 4	
Quick Start	pg 5	
Sensor Setup	pg 6	
Setting the Alarms	pg 7	
Renaming Sensors	pg 8	
Installation Tips	pg 9	
TV2 Status Screen	pg 11	
LED & Reset controls	pg 12	
Navigating with Easy Touch	pg 13	
Main Menu	pg 14	
Displaying Sensor Data	pg 16	
Operational Modes	pg 17	
Main Mode	pg 18	
Chart Mode	pg 19	
Trace Mode	pg 20	
Sleep Mode	pg 21	
Calibrating Sensors	pg 22	
TView Software	pg 24	
Current Reading	pg 32	
Frequently Asked Questions	pg 34	
Disclaimers	Pg 36	
Warranty	pg 37	
FCC & CE Mark Certifications	pg 38	
Ethernet Connectivity	pg 39	
Viewing the Clean Room Monitor over the Internet	pg 41	

TV2 Components



Your TV2 Clean Room Monitor should have come with

1. Two sensors (1 temp/RH and 1 pressure)
2. A six-foot USB cable
3. A wall transformer
4. A printed quick start guide

If any of these items are missing please contact the factory or the distributor/reseller from whom you ordered the TV2 for help.

Sensor types used by the TV2			
ID	Type of sensor	Range	Accuracy
Temperature Only			
Pressure			
" Water Column	Differential Pressure	+2.0" to -2.0"	± 0.25"WG
Temperature & Humidity			
Thermistor & Humidity	Temperature & Humidity wired or wireless	-20°C to 75°C 0% to 100%	± 0.3°C ± 3.0 %

Quick Start

Your TV2 can be installed and operating in just a few minutes by following these simple steps.

1. Connect the TV2 to a power supply (computer or wall plug). The display should immediately come on. If the display remains blank press reset by inserting a paper clip into the small hole to the left of the green LED on the face of the TV2. (see page 10).

The System Parameters screen will appear.



2. Touch 'Up' or 'Down' to select C° or F° and touch 'Enter'. The highlight will move to the next field.
3. Touch 'Up' to select the date format (MM/DD/YY, DD/MM/YY or YY/MM/DD) and then 'Enter'. The date format defaults to the US style (MM/DD/YY).
4. Set the day, month, year, hour and minute in the appropriate field by scrolling through the possible values with 'Up' or 'Down' after moving to the appropriate field with 'Enter'.
(Note: If you move to another field by touching 'Right' your changes will not be recorded).
5. Touch 'Escape'. You will be asked to verify that you want to erase all data. Touch 'Right' to highlight YES and touch 'Enter'.
6. Touch 'Escape' to return to the previous menu.


**The TV2 is now set and operating. Next TV2
will help you setup sensors and alarms**

Setting up sensors

1. Plug the pressure sensor into the position next to the green relay TV2 and the temperature/RH sensor right next to it.

(Note: The Differential Pressure Sensor has two clear plastic tubes only one of which must be positioned in the area you are monitoring. The 2nd one must be in an area where a different pressure is maintained. Also the sensor itself is extremely sensitive and can be affected by its position, so once it is in a permanent position it should be auto calibrated)

2. After a few seconds, the TV2 will recognize one of the sensors and the sensor setup screen will be displayed (see below).
3. Show Max/Min on screen will be highlighted. Touch enter and the highlight will move to the hour field in the sample data setting.

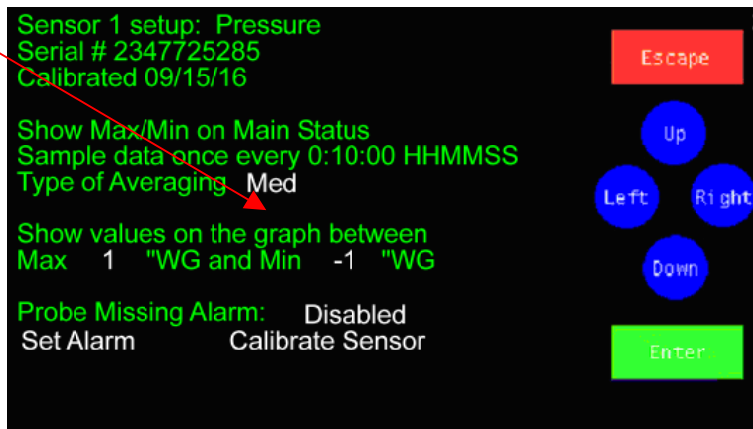

4. This determines how often the sensor will log a value. You may scroll to any value between 1 min and 24 hrs with 'Up' or 'Down', touching 'Enter' to move to the next field, or accept the default by touching 'Enter'. The default value is ten minutes (00:10:00).
5. Select the type of averaging with 'UP', or 'Down' and touch 'Enter'. There are three possible selections.
 - a. Fast – no averaging occurs. The exact measurement at the time of sampling will be stored and displayed. (Not normally used except during calibration)
 - b. Medium- some averaging will take place so that minor temperature fluctuations will be filtered out. *(This is the default value).*
 - c. Slow – additional averaging will occur. (Not normally used).
5. Set the graph max & min values (Y axis) with 'Up' and 'Down'. **This does not set the alarm.** Setting these values has no effect on the alarm, what data is collected, or what is stored. It simply sets the upper and lower point of the Y-axis of the temperature chart shown




on the TV2. Any logged value that falls outside these limits will show as a point at the top or the bottom of the display.

Note: These limits can be adjusted at any time without affecting your data.

Setting the sensor alarms

6. Highlight 'Set Alarm' and touch 'Enter'.

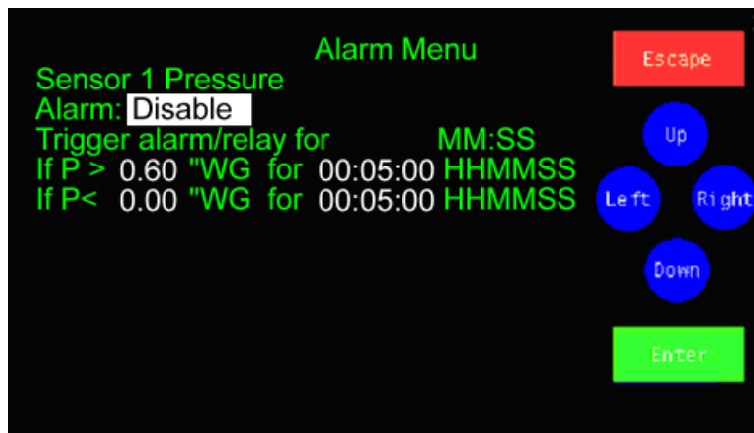

7.

8. The alarm for this sensor is disabled by default. To enable the alarm touch 'Up' and then 'Enter'.

- A. Set the trigger-alarm-time to any value between 0:00 and 99:00. This controls how long the alarm will sound and the relay will be closed.
- B. Scroll in the alarm upper limit and delay time and then the alarm lower limit and its delay time with 'Up' and 'Down' touching 'Enter' to move to each field in turn.

Note: The delay time is how long the measured value, in this example pressure, must remain above the limit before the alarm occurs. This helps prevent false alarms.

9. You do not need to enter the Calibration Menu at this time, although once the pressure sensor is positioned it should be auto calibrated.
10. Once you have set the alarm for this sensor touch 'ESC'. The 2nd sensor setupscreen will not appear so you can set it up also.



Renaming sensors

Unless you have renamed the sensors the sensors will be called 'Sensor 1' and 'Sensor 2' Once they are rename they will appear on most menus and screens as the name. See pg_____ for instructions on how to rename sensors.




Installation tips

1. **Planning** - Position the TV2 Easy Touch display close to an AC power source or your computer. It receives its power via a USB cable, which can be plugged into a computer or the wall transformer

2. Sensors:

Pressure and Temperature/RH Sensors. Decide where you are going to place each sensor. Each sensor has a 20 foot wire which needs to be run to the TV2 display. Extender wires are available.

- a. The + (positive) opening at the end of the clear plastic tube should be placed so that it senses the room pressure and the opening at the end of the - (negative) clear plastic tube should be placed so that it senses the environment right outside the room. (If your clean room has negative pressure the tubes should be reversed).
- b. Once the clear plastic tubes coming from the pressure sensor are positioned and the Clean Room Monitor is 'seeing' the pressure sensor it should be auto calibrated. Go to the 'Sensor Setup' menu and touch 'Enter'. Highlight the Calibration Menu and touch 'Enter'. The calibration menu will be displayed. Make sure that the pressure in the rooms being sensed by the two clear plastic tubes is equal and touch 'Enter' while the Auto Calibration is highlighted. This will 'zero' out the pressure sensor so any position error will be removed.

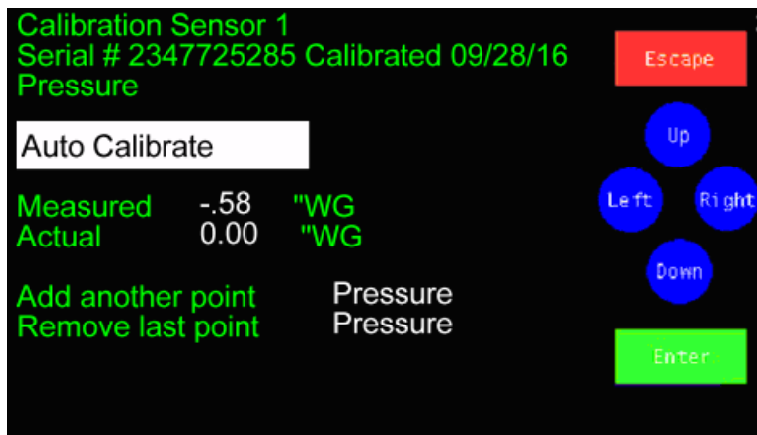


3. **Power for TV2.** Power is supplied through the USB cable. This cable can be plugged into the wall transformer which came with the Clean Room Monitor or into a PC. If the USB cable is plugged into a computer the TV2 will be powered by the PC.



4. Backup Battery - A rechargeable lithium battery is installed in the display unit to provide temporary power during a power outage. If a power outage occurs, the display will go to sleep after 20 seconds to decrease the load on the battery.


A fully charged batterie will operate the TV2 in sleep mode for at least 100 hours when new, depending on how often you are sampling data.



Operational Tip: If the battery is discharged by a power outage it will recharge itself once power is restored. The icon  in the bottom center of the display shows the battery charge level. A text message 'AC Charge' appears on top of the green battery icon any time it is being charged through the USB cable. This is normal. The AC-Charge message disappears when the battery is fully charged. The lithium battery slowly loses its charge over time, so that after five years it will only run the TV2 for 72 hours and after 10 years it will run the TV2 for 40 hours.

The Clean Room Monitor

The Status Screen (see pg 14 for alternate displays)

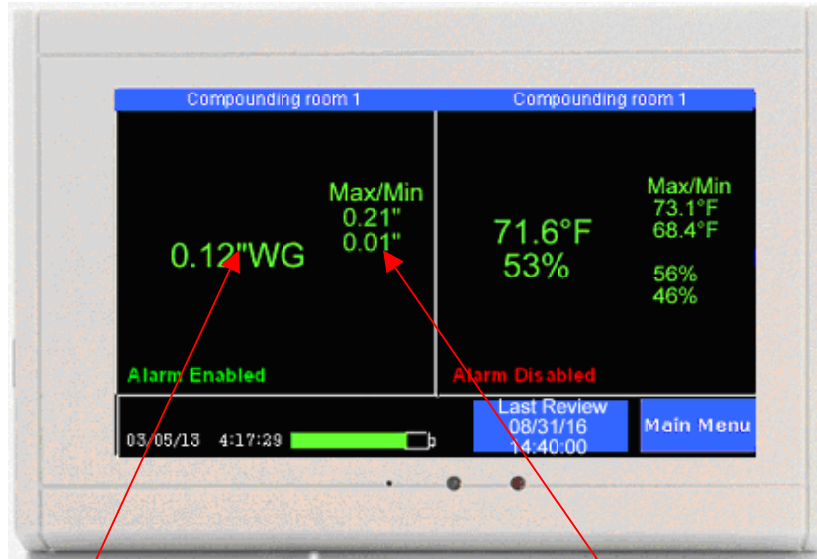

Current Differential Pressure.
Updated several times a minute.

Max/Min temperature recorded since the last reset.
Appears in red if the reading is too high or low.

Additional information can be seen by touching various 'hot spots' on the Easy Touch display.

For example:

1. Touch a measured value to see the history chart for that sensor.
2. Touch a Max/Min area to reset it to zeros.
3. Touch 'Main Menu' to set or change various settings, such as the scale, the temperature sample rate, high-low alarms for each sensor, etc...
4. Touch Last Review to log an instance of an operator review.
 - a. Clean Room log - to record a review touch the Last Review button. The monitor records that review on its on screen chart. If the data is downloaded to a computer each review shows on the chart as a vertical line.

The LEDs and reset button at the bottom at the bottom center of the display.




The green LED blinks once a second, indicating the display is collecting data and working normally. This LED will continue to blink during a power outage, indicating that it is collecting and storing temperatures from the sensors

The Red LED blinks when the display is operating on batteries, or if an alarm occurs.

The small hole on the left of the green and red LEDs is the reset button. Insert the paper clip until you feel the button press down. It will pop back up as soon as you release the paper clip and a system reset will occur. (Your settings and data will be preserved).

Navigating with Easy Touch


Where to touch

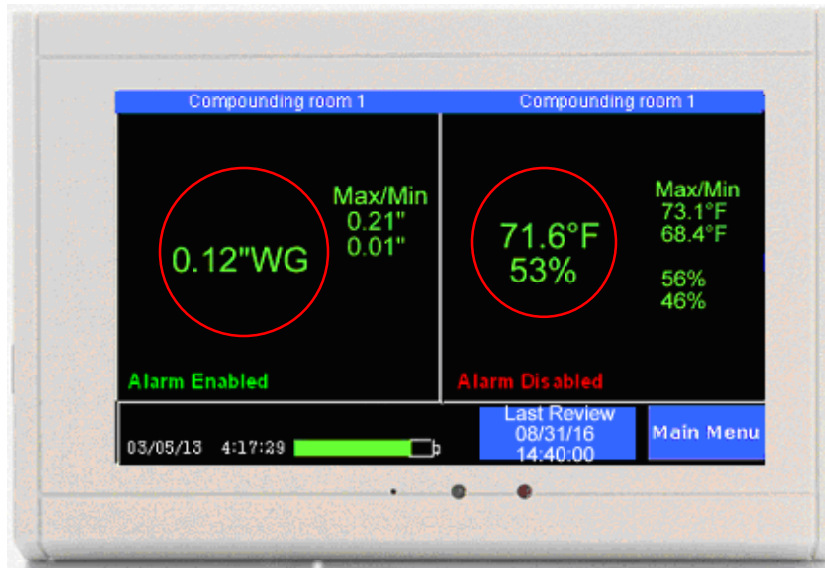

Touch any value to see a logged data chart for that sensor.





Touch 'Main Menu' to change settings.

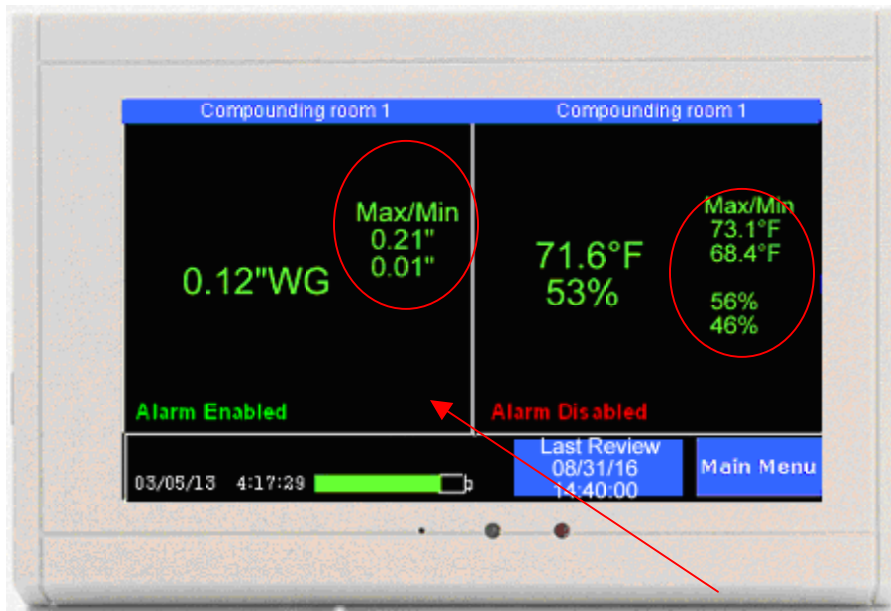


Touch a Max/Min temperature to reset it

The Main Menu

Touch 'Main Menu' at the bottom of the Status Screen to enter the menu system.

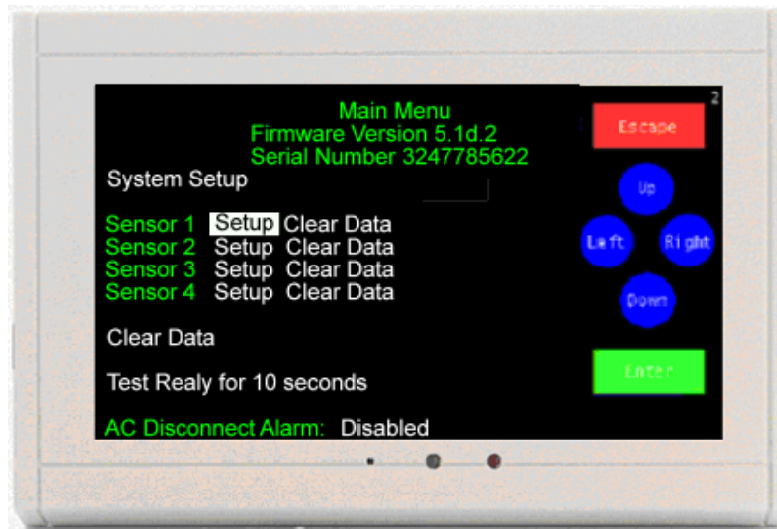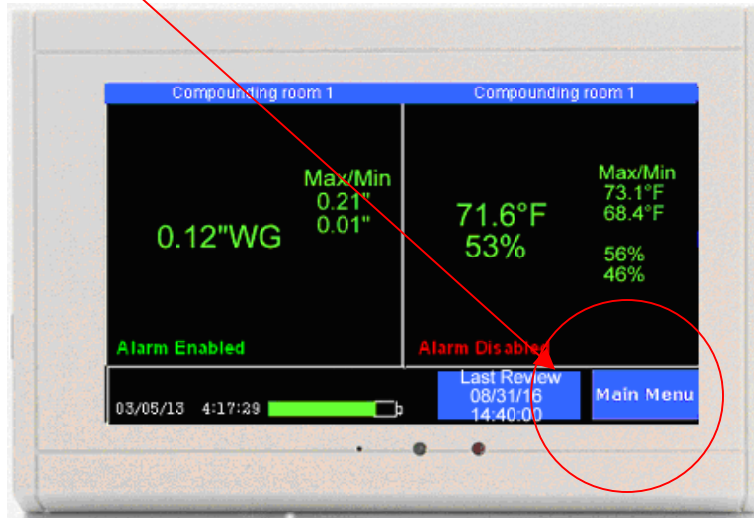

To change the date and time select 'System Setup' and touch Enter. This will open the System Parameters menu where you can select the temperature scale, set a password, change the date and time, enter the network menu and place the monitor in the Deep Sleep mode.

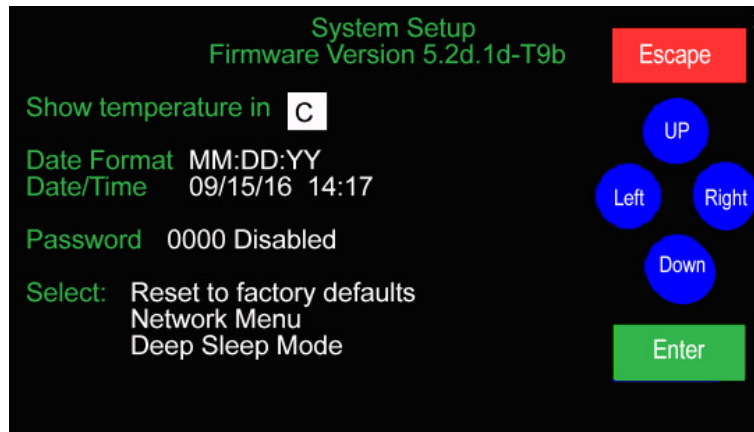

With the System Parameters menu you can change the temperature scale, the date and time, activate a password to restrict access to the menu system, reset all values to the factory default, and put the TV2 into a deep sleep mode.

To make a change:

1. Make sure the proper field is highlighted by touching 'Left' or 'Right' until the desired field is reached. If the last field on the page is highlighted touching 'Right' will move the highlight to the first field on the page.
2. Once the field is highlighted, change the value by touching 'Up' or 'Down'. Appropriate values will be scrolled through.

Note: The longer you touch 'Up' or 'Down', the faster it will scroll through the possible choices. Once it reaches the last possible choice it will wrap around to the first choice.

3. Touch 'Enter' after selecting the proper value.

Note: It is possible to move to the next field by touching 'Right' but your change will not be saved. The change is only finalized by touching 'Enter'.




Operational Tip: *Touching 'Up' or 'Down' scrolls through possible values at a fast rate. The longer you hold your finger on the screen, the faster it scrolls.*

Displaying Sensor Data

The TV2 main display (current status) will change depending on how many sensors you are receiving data from . If you have one sensor plugged into or linked to the TV2, the display will look like the one below.



Once you plug a second sensor into the TV2 the current status screen will change to show both sensors as depicted below.

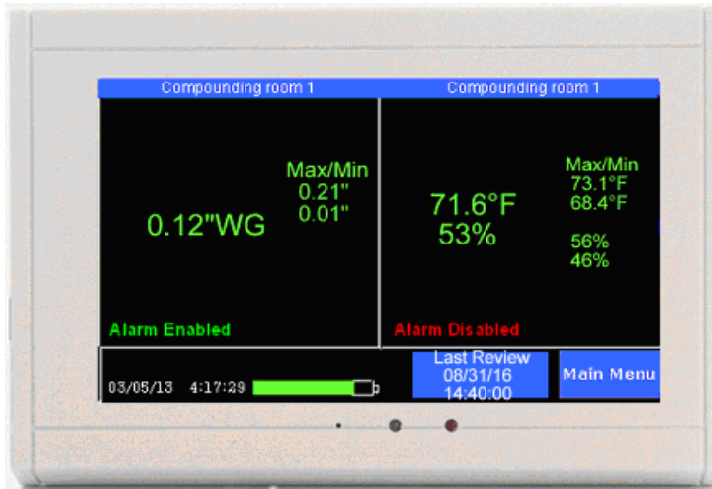


This display is dynamic. It will change depending on the units of measurement are for the sensors. However, the display will always show:

1. The current measurement for each sensor
2. Whether the alarm is enabled or disabled for each sensor
3. The current date and time
4. The backup battery charge state
5. The date of the last data review.

Operational Modes

The TV2 has four operational modes: *Main; Chart; Trace, and Sleep.*

Main Mode

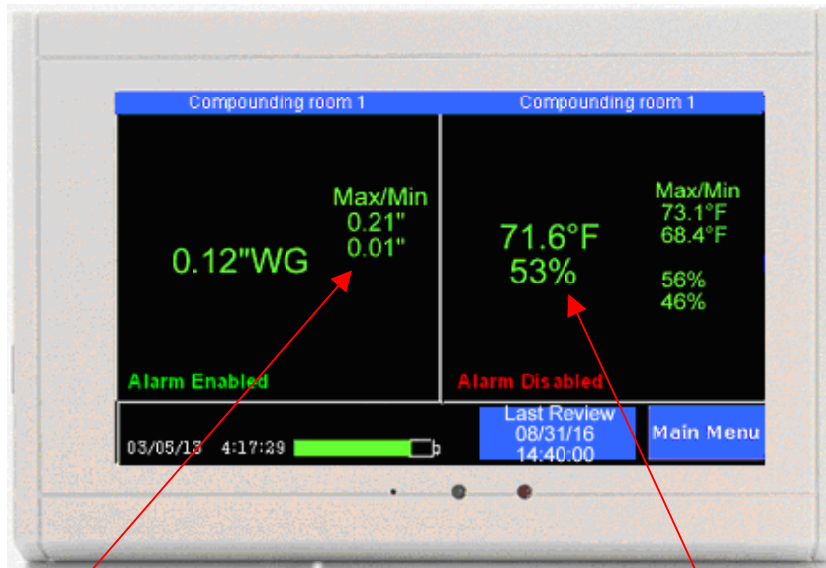

The screen area for each sensor is divided into sections showing its current reading along with the maximum and minimum value recorded for that sensor.

Elements of the display:

1. The pressure or temperature/relative humidity, is displayed in large green letters. The max/min readings are also shown in green, unless one of the values violated an alarm limit, in which case it will be red.

Note: It is possible a max or min temperature was too high or low but an alarm was not triggered. This would happen if the violation was shorter than the delay time.

2. If a wireless sensor is not linked to the TV2, a message stating "Sensor Not Installed" will be displayed in that quadrant.
4. If wireless sensors are being used the battery strength for that sensor is shown. If the battery level drops below 20% the number turns red, rather than the normal green color. (No battery strength is shown for wired sensors).
5. The battery icon shown at the bottom of the current status display is for the TV2 display backup-battery.

Chart Mode

To see the logged data for a particular sensor, touch that sensor's current value.

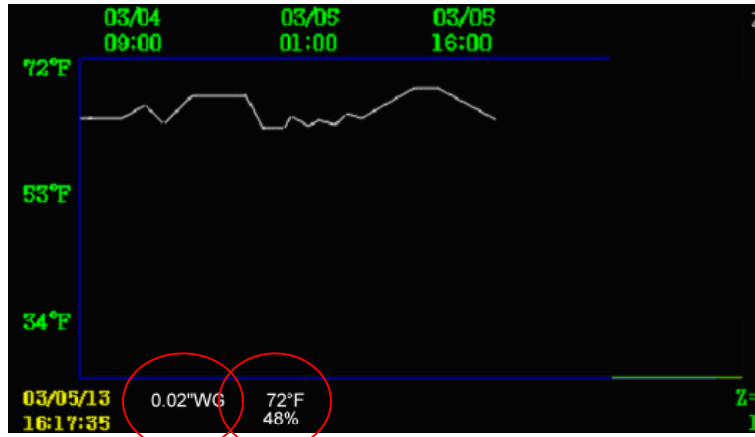


Chart for sensor #2

Hot Spots to switch sensors

1. The scale, in this example temperature, which appears as the Y-axis of the chart, is set in the sensor setup menu. (There could be temperatures above or below the Y-axis limits)
2. The number in the upper right hand corner of the display indicates which sensor's chart is being shown (sensor 2 in this example).
3. The time line along the top of the chart, the X-axis, indicates when the temperatures were collected. The dates on this line will change if you scroll left or right, or zoom out or in to view additional data. (See FAQ page 35 for more explanation of the zoom feature).
4. The bottom two rows of the display show the current day and time along with the most recent reading from each sensor. Also shown, at the bottom right of the screen, is the zoom level. (See FAQ on page 35 for an explanation of this feature)

Use the hotspots to switch charts. Lightly touching any of the four temperatures on the bottom of the display will immediately change the screen to show that sensor's temperature history chart.




Note: *The TV2 stores a lot of data but eventually it fills up. Once it does, the newer data rolls over the oldest data. If you are sampling data every 10 minutes the last 1.5 years of data are stored and can be viewed.*


Touching anywhere in body of the chart adds four navigation buttons (blue and green triangles) as shown below so you can view additional information.



Touching the bottom blue triangle doubles the amount of data displayed on the chart (see zoom in FAQ, pg 35). The top blue triangle zooms into the display, so less data is displayed. The green triangle on the left scrolls backward, showing older data, while the green triangle on the right shows more recent data. To return to the status screen touch 'Escape'.

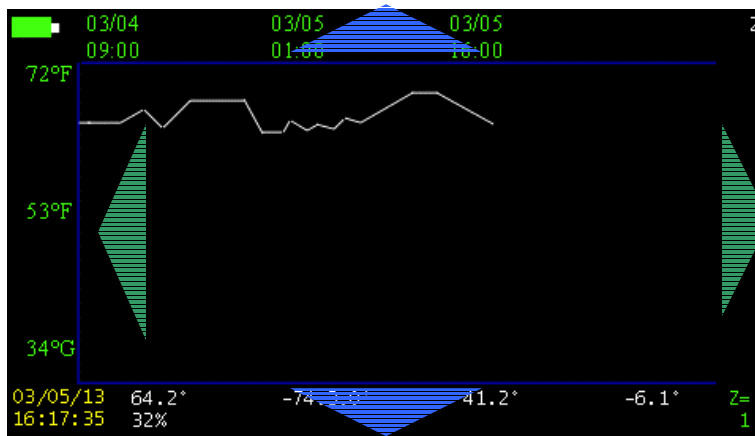


Trace Mode

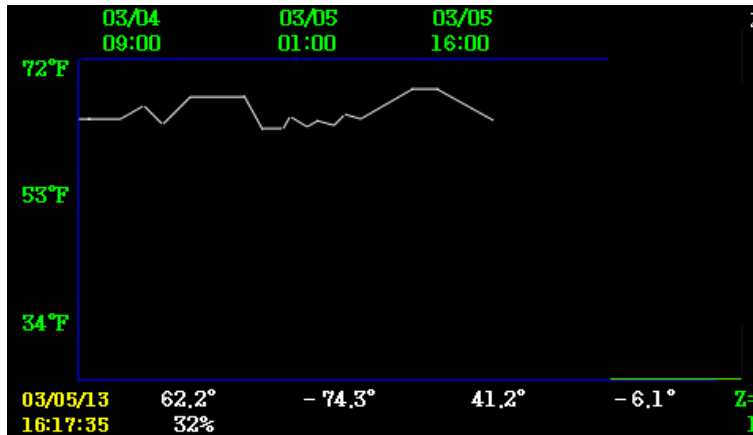

Trace mode hotspot.

Touch the date area to enter the trace mode to highlight individual temperatures. A white horizontal indicates what data is being highlighted. The value under the white line is stated on the bottom of the screen.

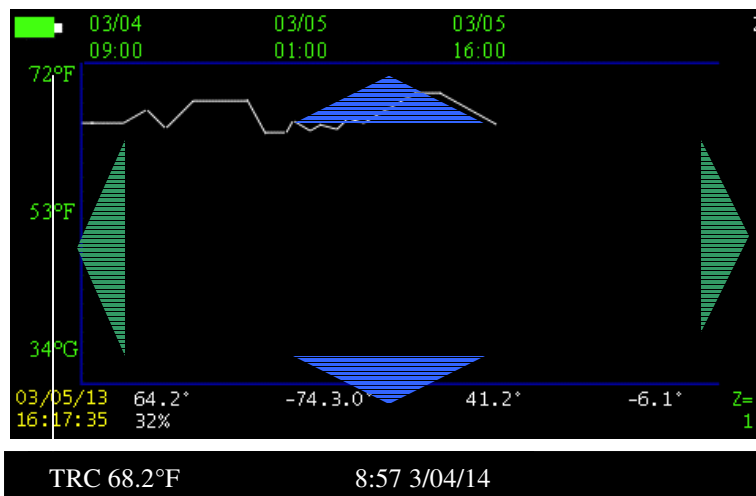

In the trace mode, touching either green triangle will move the white vertical line back and forth to highlight individual temperatures. The temperature beneath the vertical line is shown, along with the day and time it was recorded, at the bottom of the display. (If the display is zoomed out both the high and low temperatures taken during the zoom interval will be shown).

To exit the trace mode touch 'Escape' at the top left of the display.

Sleep Mode


There are actually two different sleep modes. A light sleep mode is entered anytime the TV2 is operating on battery. This preserves the charge on the battery. A deep sleep mode can be selected by the user to suspend all functions of the TV2. This deep sleep mode actually turns the TV2 off and all functions except the internal clock are shut off. Once the TV2 is put into deep sleep mode it will remain in this state until power is supplied. If power is supplied by plugging the cable into the USB socket the TV2 will wake up.



1. In both light and deep *Sleep Mode*, the display is blank.
2. The TV2 automatically enters the light sleep mode after 20 seconds, if power to the TV2 is cut. The TV2 continues to perform all normal functions while running on batteries performing all normal functions, including, taking and storing temperatures, sounding alarms and downloading data if auto downloads are setup. The only difference in operation is that the display is blank.

Calibrating sensors

To calibrate a sensor, access the sensor setup menu by touching 'Main Menu' and 'Right' until the sensor setup area is highlighted.

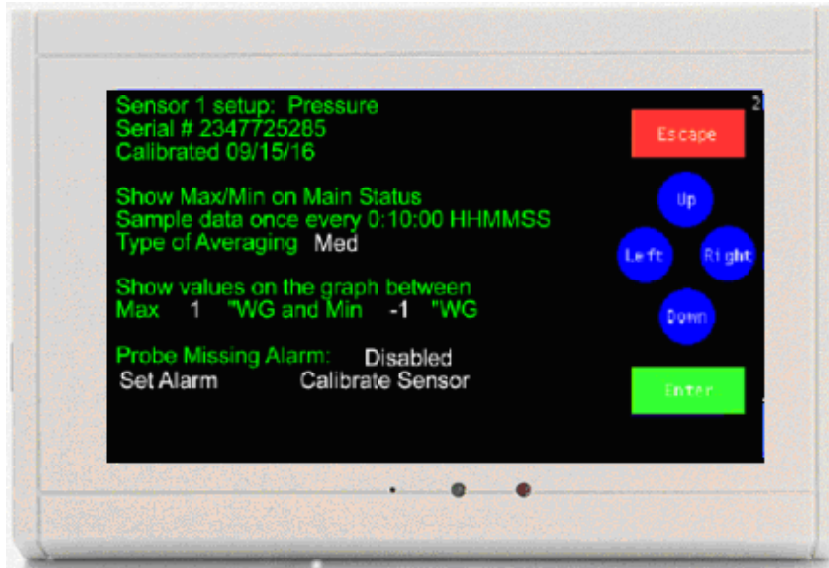

Touch 'Left' to highlight Calibrate Sensor and touch 'Enter'. The calibration table for that sensors will be shown.



Calibration Table

Calibration data entered in the calibration table will be on the sensor so it can be moved to another TV2 if needed.



Each sensor may have up to three different calibration points. When the calibration screen first opens, only one point is listed, but you can add two additional points by highlighting 'Add another point' and touching 'Enter'.

The 'measured value' is the temperature shown on the status screen, and the 'actual value' is what it should be reading. This 'actual value' is most often obtained from another very accurate comparison instrument.

How TV2 uses this data:

1. One point – Any temperature will be offset from the measured value.
2. Two Points – Any temperature will be adjusted by the offset equal to the point on a line drawn between the two points.
3. Three Points – Any temperature will be adjusted by the offset equal to the point on a line drawn between the three points. The line could be straight or the slope between point 1 and 2 could be different than the slope between point 2 and 3.


Note: Once either an actual value has been entered into one of these fields the values displayed in these fields will not change. Even if the TV2 sensor is showing some very different value on the current status screen the measured and actual value will be fixed at the values you keyed in during the calibration procedure.

(Suggested calibration procedures can be copied from the support page on the 2di web site)

TView Software

Copying data from the display

Downloading, or copying data from a TV2 to a computer is done via the USB cable or over your LAN. If you are powering your display with a wall adaptor you will need to unplug the USB cable from the wall adaptor and plug it into your computer to download data. This will not affect the data you have already collected.

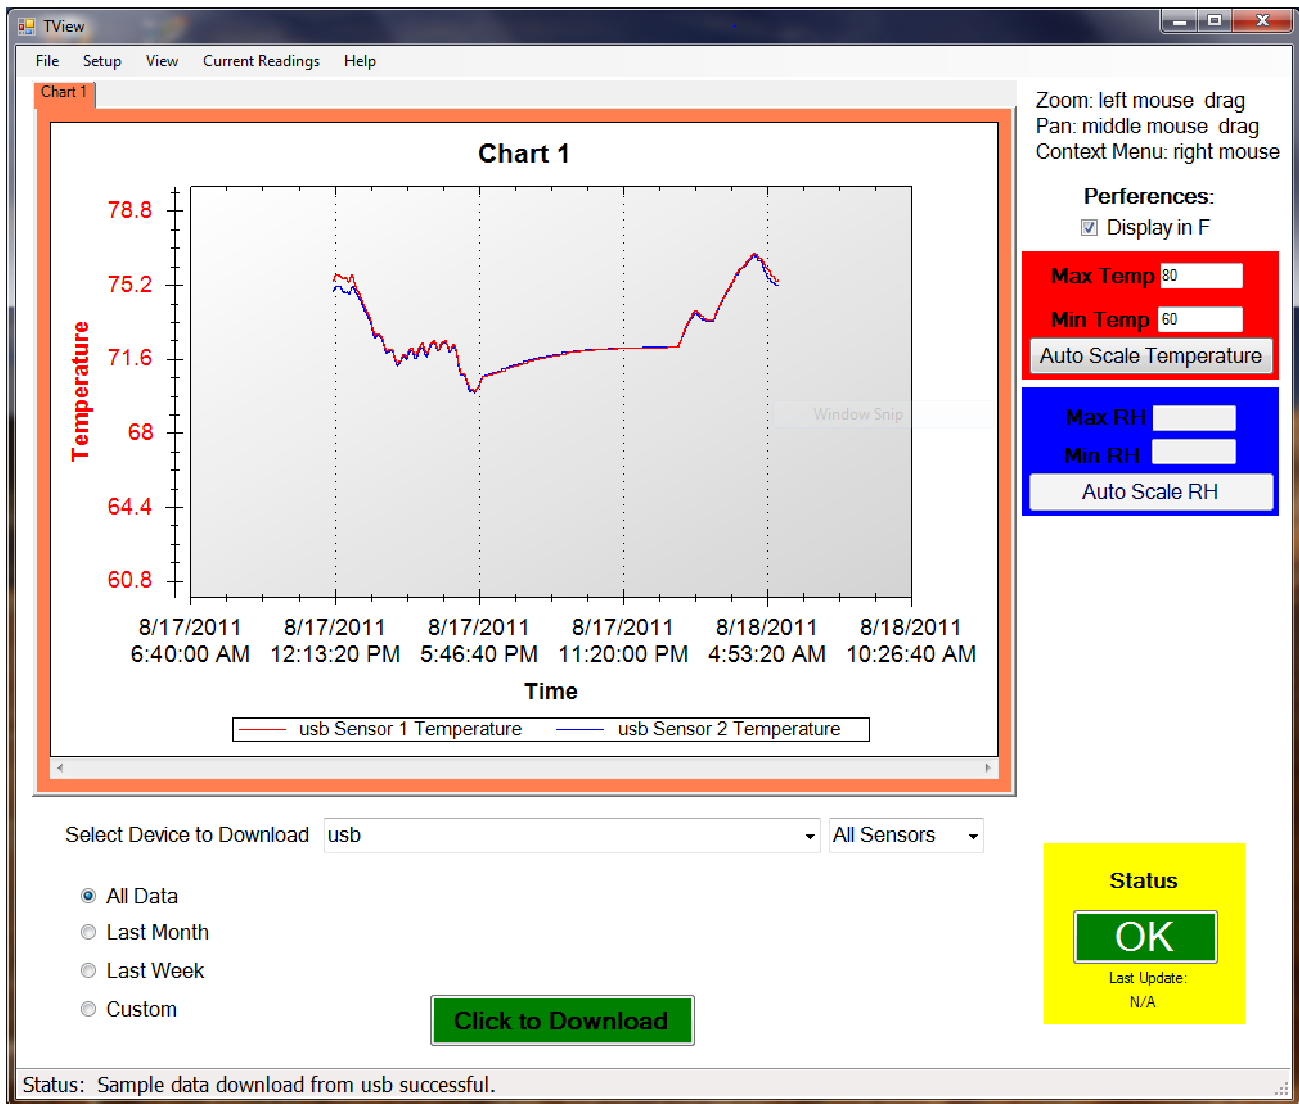


TView Software Users Guide

To obtain the free version of TView software:

1. Click on the 'Support' link on any page on: <http://www.e2di.com>.
2. Click the link for the PC Download software and select the version you need.
3. Save it to your computer.
4. Unzip the file and click on Setup. *(If you have an older version of the software already installed on your computer you must uninstall it first).*
5. During the install process, a directory may be created and files will be written to your computer. Make sure you have rights to do so. You will also be given an opportunity to install the software in a directory other than the default directory. We recommend that you accept the default directory. This installation process is just like any other Windows installation process.
6. Once the software is installed, click on the TView icon to open the program. The icon will be in the Two Dimensional Instruments folder. You can, of course, copy the TView icon to your desktop for convenience.

When you open the TView software a small popup window will ask for a user signature. You may skip this step unless you must comply with 21 CFR 11 requirements. Once you save a file with a Users Signature you will not be able to open that file without supplying the Signature.

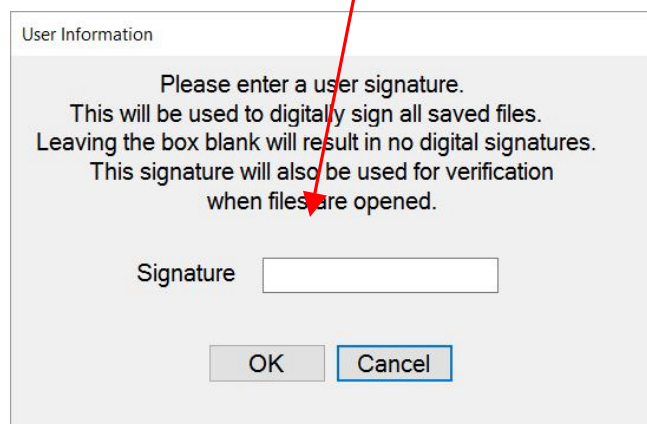


To Copy Data from the TV2

When you open the TView software it begins scanning all your computer's serial ports to find TV2s. Once it finds one, a window will open asking for a name. This is strictly for your convenience; you can name it anything you want. Once you enter a name you will see it here.

TView continues to scan for TV2s asking you to name each until it has found them all. If you have other devices using serial ports that you do not want the software to scan, you can select the 'setup' tab, then 'communication setup' and then click on any of the listed serial ports you do **NOT** want TView to scan.

Once you have identified all of your TV2s, you are ready to copy data from them.

1. To copy data from a TV2 you must first select it. Click the small arrow on the right side of the box entitled 'Select Device to Download'. All known TV2s will be listed by name. Select the one you want to download data from.

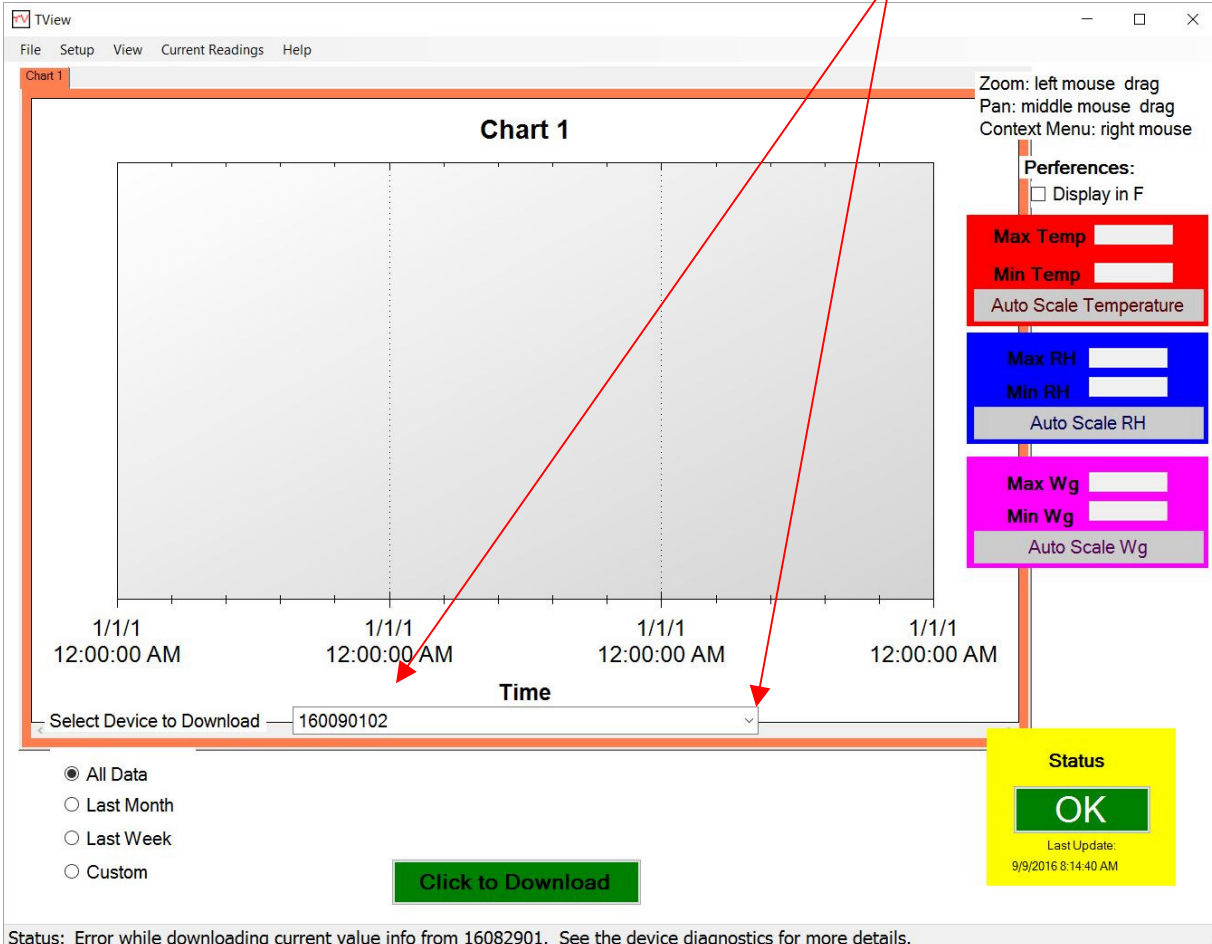




- a. Select the device to download by left clicking it.
 - b. Select the date range you want to download by clicking one of the buttons to the left of the green download button. The 'All Data' button is selected by default, so that all stored data for the selected Clean Room Monitor will be downloaded and displayed. Clicking on last month, last week, or custom and setting a date range will cause only that data to be copied to the PC and displayed. *This can be tricky and may not work the way you think it should if the date on the TV2 is different than the one on the PC.*
 - c. Click the 'Click to Download' button.
 - i. If there is already data from the same TV2 on the chart you will be asked if you want to replace the existing data. If you answer yes, the displayed chart will be erased. If you do not want to erase the data, click 'no' and save the existing data before downloading additional data. You could also move the chart with existing data to another tab, by right-clicking on the chart., or download the new data to another chart.
2. By default, the TView will set the scale of the display so that the downloaded data will be positioned in the center of the chart. If you type a value in the Max - Min boxes to the right of the display, the scale will be adjusted accordingly.
 3. Once the chart has been copied to your computer, the actual data can be moved around or zoomed into, to highlight a particular area.
 - a. To zoom into a group of temperatures, draw a box around them with the mouse: Position the cursor at the top left hand corner of the area and while holding down the left mouse button move the cursor toward a lower right position. When the mouse button is released the chart will be rescaled to show only those temperatures within the box you have drawn. To return to all temperatures, click the right mouse button and select 'Undo all Zoom/Pan'.
 - b. To move a plot to a different chart right click the mouse on the chart and select 'Move a Plot to another graph'.

Working with Charts

1. When TView is opened, a blank chart is displayed. It is listed as Chart 1 on the tab at the top of the chart and as the title of the chart. You can rename this by double-clicking on the tab and typing a description in the text box. This will rename the chart and the tab.
2. You can hover over any point of the curve with the mouse cursor to see the value, the date and the time it was saved.
3. A temperature scale is on the left of the chart and a RH scale, if humidity has been copied its scale is on the right side of the chart. You can change the temperature scale to Fahrenheit by clicking the box to the right of the chart under preferences. You can also set the Y-axis for temperature and humidity by typing a value into the boxes provided.

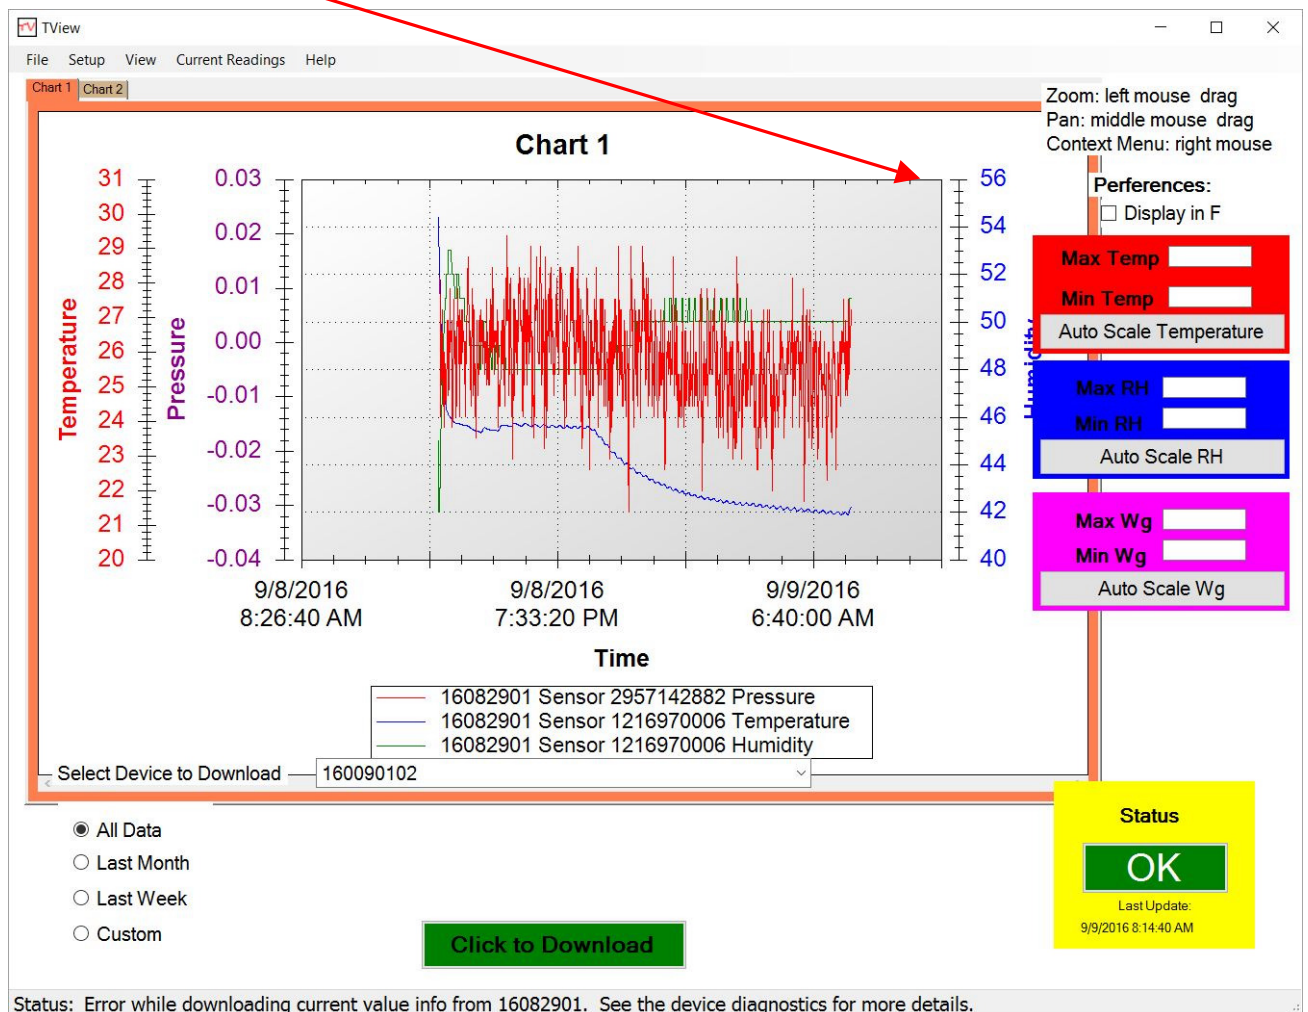



Drop-Down Tabs

1. The 'File', 'Setup', 'View', 'Current Readings', and 'Help' tabs:

a. File

- i. **New Chart.** This creates an empty chart with a new tab to the right of any already displayed tabs. The tab and chart description can be changed by double clicking on the tab itself and typing the new name in the text box. Multiple charts, each with its own tab can be created.
- ii. **Open Chart.** This command allows the user to open a file previously saved and stored on a computer. You will be prompted for a file name. Only files with a file extension of TXV can be opened. You must enter a Signature if the chart was originally saved with a Signature (see iii below).


Note: It is not possible to load the same file into more than one chart or to change any part of a file displayed in TView.

- iii. **Save Chart.** This saves the active chart to your computer . The saved chart will be encrypted and have a TXV suffix. It is encrypted with the Signature you entered when the program was opened.
- iv. **Export Chart to .XLS.** This exports the chart shown on the active tab to an XLS file that can be opened with Microsoft's Excel. Each sensor's data will be transferred to a separate worksheet on the Excel chart. It is possible to change this data in Excel.
- v. **Print Chart.** Sends the active chart to a printer. If there is more than one plot on the chart, you should use a color printer so you can tell the plots apart from each other. The chart looks better in landscape mode that portrait mode.
- vi. **Close chart.** This immediately erases the selected chart and deletes it from your computer.
- vii. **Run in System Tray.** This minimized the TView program and moves it to the background. This is useful if you are auto-downloading to your computer and want to leave the program running without seeing it on your desktop.
- viii. **Exit.** This closes the program and stops any further activity.




b. Setup tab:

- i. Manage TV2s. Used to rename a TV2 and determine which port it is attached to. *You can view the available ports on your computer with Device Manager(found in the hardware section of Properties of the 'My Computer' program).*

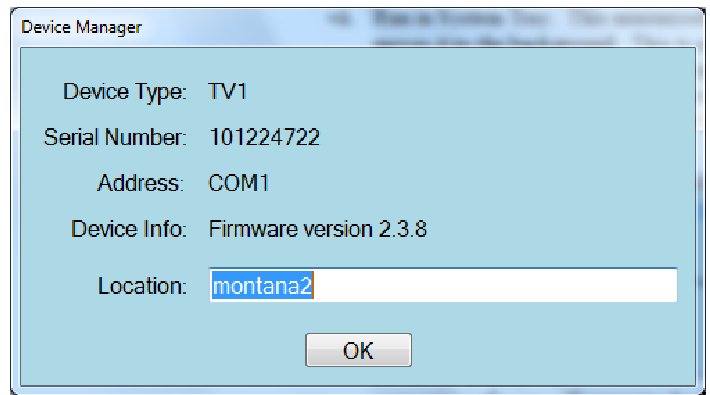

- ii. Schedule Download. Once scheduled, data will automatically be written to your file ever few minutes.
 1. Select the TV2 to be downloaded by clicking 'Add New Device' and selecting the one you want.
 2. Type in the file name and specify the location on your computer where you want the data stored. The file name will be proceeded by a year, month. A new file will automatically be created every month.

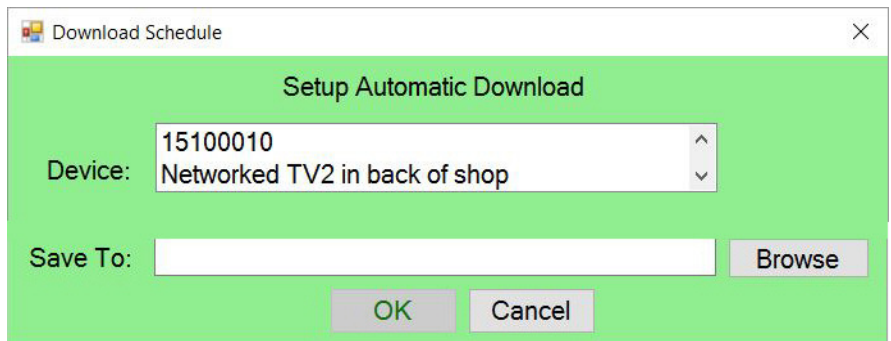

Note: You must have rights to create and to write files on your computer when you schedule an auto download.



- iii. Communication Setup. You can specify which serial ports you do NOT want TView to see. You can also enter an IP address for a TV2 which is on your LAN.
- iv. Change user information. This is used to change a username and password for a selected TV2.
- v. Email Alerts. This will only appear if you have TView with email alerts. *Step by step instructions for setting the email alerts can be found under the 'Help' tab.*



c. View tab:


To view alarm settings or logs, the TView software must be in Auto-Downloading mode.

- i. Alarm setting. Shows alarm setting for a particular TV2. When you select this, TView queries all attached TV2s for alarm settings.
- ii. Alarm log. Shows a record of all alarms for all TV2s being auto-downloaded. This display is accessed when the user clicks on the status button at the lower right of the TView program. If a known TV2 goes into alarm mode, the status button will indicate that an alarm has occurred by displaying the word 'Alarm' in red letters to alert the user. By double clicking this button the alarm log will be shown. After reviewing the alarm, click 'Mark as Reviewed' to hide it or right click an alarm and delete to remove the alarm from this list.

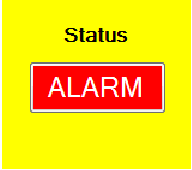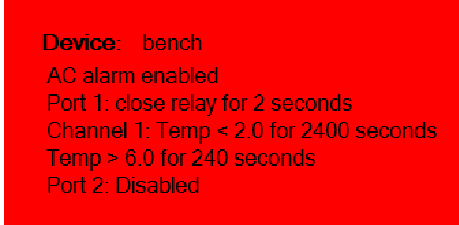

- iii. Email alerts. This displays a history of all email alerts sent.
- iv. Legend. This moves the legend for the sensors downloaded. It also allows you to turn off the legend which is helpful if you are downloading data from a TV2 with a lot of sensors.

d. **Current Readings:** This screen displays real time data from TV2's sensors. Data does not have to be auto-downloading but the TV2 must have been detectable by the TVView software.

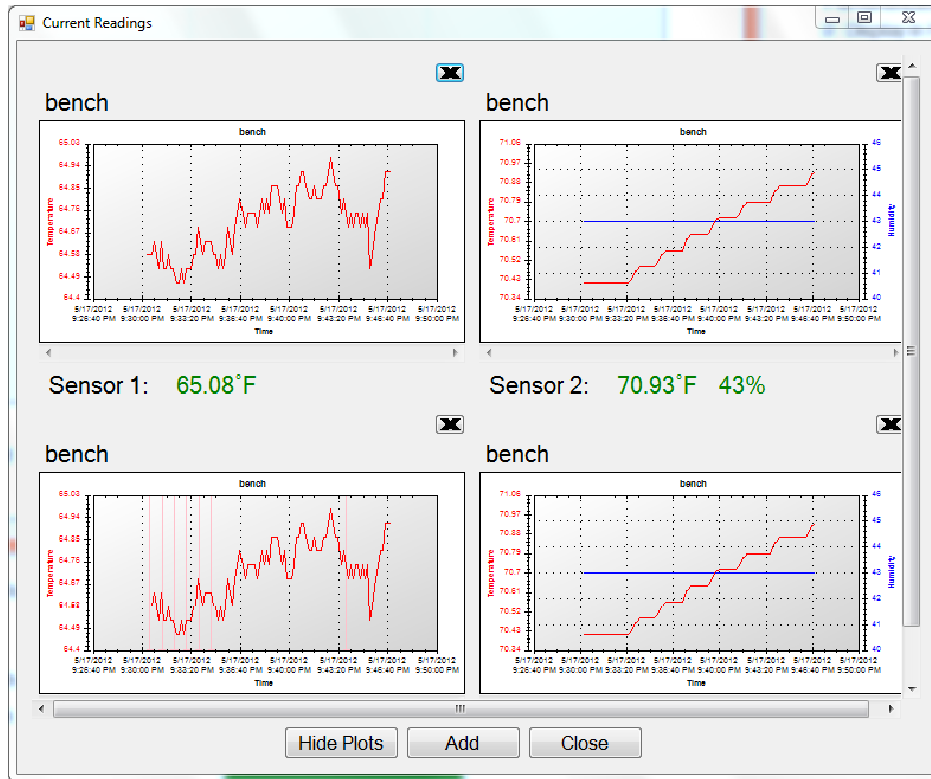

- 1) When this window opens it will be blank. To add a sensor to this screen click the 'Add' button and select the TV2 to which the sensor is attached. A popup will list the sensors attached to that TV2. Select one or more of them by clicking on it. The last 100 readings will be displayed in the chart along with the current temperature. You can add additional sensors to this page. Clicking the 'Hide chart' button will hide the chart and display only the numeric reading. The charts are updated every few seconds.

(Note: These temperatures are the actual values seen by the sensor, which may or may not be the same as the logged temperatures, depending on how you are averaging data.)


- 2) A plot can be removed by clicking on the X in the upper right area of the chart.
- 3) If a plot is displayed and an alarm occurs for that sensor, the temperature will turn red and the alarm status button on the main page will be updated.




e. Help:

1. 'User guide'.
2. Email Alert Setup. This word document contains a step-by-step guide to implementing the Email Alert Setup.

3. 'TView Diagnostics Menu' will be used when requested by a 2di technician. All activity of the TView software is archived. This information can be saved to a file and emailed to 2di.

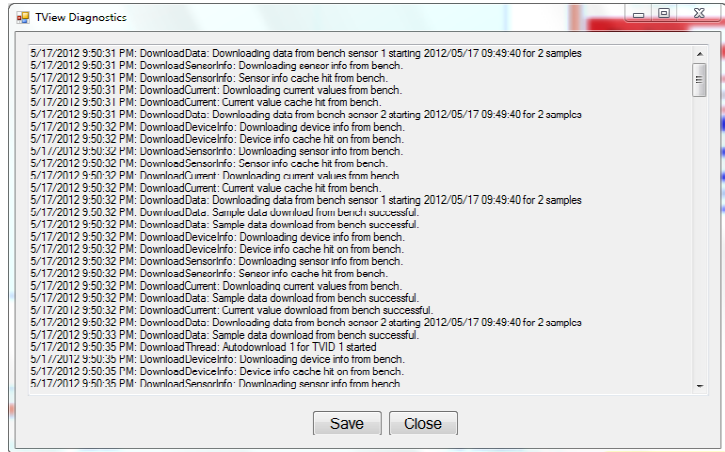

4. 'TView Communications Diagnostics' Menu archives all communications between TView and TV2s for support and troubleshooting.

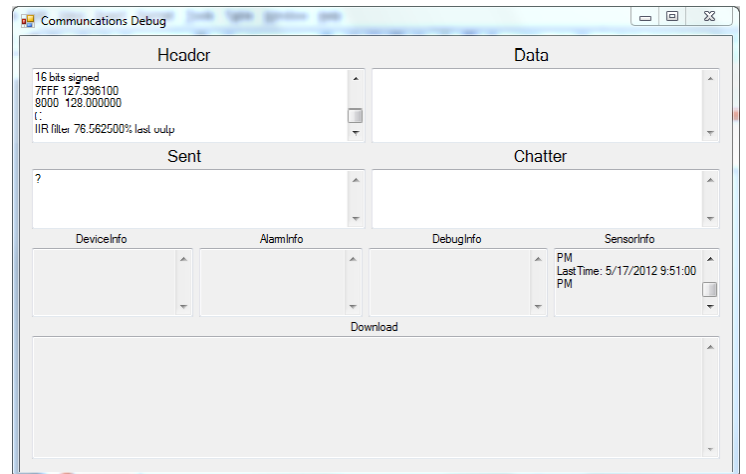

5. 'Save Diagnostics file to send to 2di'. This will save the diagnostic file to your computer so that it can be emailed to 2di for help in troubleshooting.



FAQ

1. Can I tell if a temperature high or low alarm occurred by looking at the Clean Room Monitor display?

Yes – If an alarm was triggered an upper-case “A” is placed on the chart at the time the alarm began and a lower-case “a” at the time the alarm was silenced or expired.
2. What is the purpose of the Zoom-out and Zoom-in buttons on the TV2 chart display?
 - a. The amount of data displayed by the chart on the TV2 changes according to the Zoom setting. One data point is plotted in each column if the chart is zoomed in completely (Zoom =1X).
 - b. Touching the ‘**ZOOM-OUT**’ button (green triangle at the bottom of the chart display) causes more than one data points to appear in each column. The data on the TV2 can be zoomed out 10 times (Zoom =10X). This means that the user can see between 4 months and 256 years of data on one screen, depending on how often the sensor is collecting data. In any zoomed-out mode more than one collected measurement appears in each column. The recorded measurements are displayed as a high-low vertical bar.
 1. So, for example, if the TV2 is set to Zoom=2X then each column will show two temperatures connected by a vertical line whose top is the higher temperature and whose bottom is the lower temperature.
 2. If the chart is zoomed out further than 2X to say Zoom = 6X, the measurements (in this case all 32 of them) will appear as a single vertical line with the highest of the 32 temperatures being the top of the line and the lowest of the 32 temperatures as the bottom of the line. The TV2 can display between 1 and 512 measurements in each column. The **ZOOM-OUT** green triangle can be touched ten times (Zoom=10X), which will show the maximum amount of data. This method of displaying multiple measurements in the same column allows the TV2 to display large amounts of data in the same way that stock prices are displayed with high-low bars covering a period of time.
3. Can I change the date and time without losing data?

If you are set the date or time **back**, and data stored in the monitor will be cleared (You will be warned before any data is actually erased). You can move the time forward **1 hour or less** without losing data. A data gap will appear in the temperature line. If you move the time forward more than one hour, the old data will be erased.
4. How much data can be exported to Excel with the TView program?



When you open a file with Excel that has been saved with TView only the first 65000 data points will be saved. (This is a limitation of the Excel program not the TV2 or TView). The TView program has no such limitation and will save and display all data.

14. Can I move TV2 to a new location without losing data?

Yes. If the move is a short one you can just unplug the monitor and move it. If the TV2 will be unplugged for several days you should put it in a sleep mode. Go to the Main menu by touching 'Enter' twice and touch 'Left' to highlight 'Deep Sleep Mode'. Touch 'Enter'. The monitor will go into a deep sleep mode during which the clock will continue to run but no other functions will occur. Once TV2 is repositioned and power supplied it will reboot. If the display does not immediately wake up press the 'Reset' button with a paper clip. Your previously collected data will still be there and will display properly, however, the system clock may be off.

15. How do I change the TV2 batteries?

The TV2 has an internal Lithium battery which is not user serviceable. It should last for at least 10 years. If it does fail it must be returned to the factory for replacement.



Disclaimers

:::Disclaimers:::-----

1. Although Two Dimensional Instruments, LLC has made operational tests on our software "TView", we cannot guarantee that all operations will work properly under all conditions.
2. Two Dimensional Instruments, LLC shall not accept any responsibility for any damage whether direct or indirect that results from the usage of the TView software of the TV2 Easy Touch monitor.
3. Specifications of "TView software" may be subject to change and service may be terminated without advance notice to the user. In such a case Two Dimensional Instruments, LLC shall not be responsible for any damages whether direct or indirect from the inability to use "TView software".
4. Two Dimensional Instruments, LLC has no obligation to correct any defects found in "TView software".
5. If the TV2 firmware is modified in any way it will be rendered inoperable and non-responsive. It is not possible for firmware that has been changed to be upgraded in the field. In this case the TV2 display must be returned to Two Dimensional Instruments, LLC for reprogramming for which service additional charges may be incurred.

:::Copyright:::-----

1. All copyrights "TView software", including all of the programs and all related documents, are the sole property of Two Dimensional Instruments, LLC.
2. "TView software" without Email notification is for use free of charge. Redistribution is permitted as long as it is to others for non-profit. In this case, all terms and conditions as written in the above disclaimers automatically transfer and hold true and valid for the party to which the program was redistributed. Please note that if you wish to commercially redistribute the program please contact Two Dimensional Instruments, LLC directly.
3. The reprinting or redistribution for commercial purposes whether in part or in whole, in magazines or as a part of any product is strictly forbidden without the expressed consent of Two Dimensional Instruments, LLC. Any inquires concerning commercial redistribution should be directed to the Sales Department of Two Dimensional Instruments, LLC.
4. Please do not attempt to make any changes or modifications to "TView software".



Warranty

The TV2 line of Instruments is warranted by the manufacturer to be free from defects in material and workmanship for a period of twelve months after delivery. In the event of a claim under this warranty, the product or part must be returned to the factory for repair or replacement (shipping prepaid) with a Return Authorization Number. It will be repaired or replaced at the factory's option without charge to the user. Any freight charges incurred may, at the factory's option, be passed on to the user.

This warranty does not cover routine calibration or battery replacement. The forgoing warranty and remedy are exclusive and in lieu of all other warranties either expressed or implied.

The manufacturer shall under no circumstances, be liable for consequential or incidental damages resulting from failure or malfunction of its products. The manufacturer makes no warranty for products not manufactured by itself or for any products modified by the buyer or subjected to misuse or neglect.

Under no circumstances shall the manufacturer be liable for consequential or incidental damages to any other products or inventory as the result of the use or misuse of its products.



FCC Verifications

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

This equipment conforms with the Australian and New Zealand EMC requirement for generic products to be used in residential, commercial and light industrial environments. AS/NZS 4251.1.1:1999 (AUS/NZ Class B verified)

Declarations of Conformity and Certificates of compliance can be Downloaded from our web site at: <http://www.e2di.com/doc.htm>


Updated and printed in the USA.
Copywrited 2013

Appendix

Configuring the TV2 for operation on a LAN

If your TV2 has a network option it will need an IP address, so it can be identified on your Local Area Network (LAN). Each TV2 already has a unique MAC address which has been programmed by the factory. When you use TView to download data it identifies the TV2 by its MAC address.

When the TV2 is plugged into the network the 'Network Menu' will be displayed on initial power up.

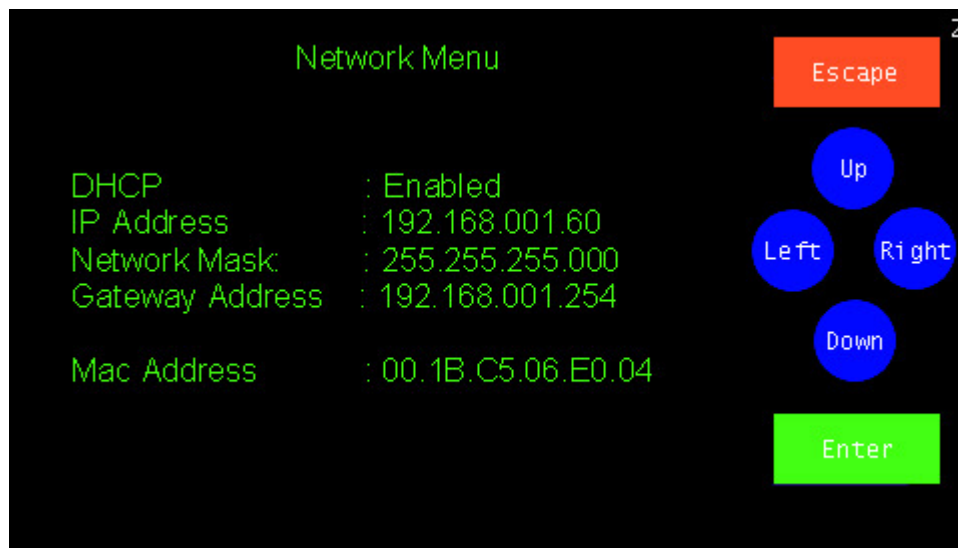


If you 'Enable' DHCP a host on your network will automatically assign an IP address. You can assign a static IP address to a TV2. To assign a static IP address disable the DHCP first and then enter the IP address into the IP Address position.

Whether you enable DHCP or assign a static IP address make a note of it so you can enter it into the communication setup area of TView so you can download data.

Exit this menu by touching 'Escape'. This menu can be accessed at any time through the 'System Setup' menu.

Configure TView

To configure TView to communicate with a TV2 on your LAN call up TView and click on 'Setup' and then click on 'Communication Setup'. The menu shown below will be displayed.

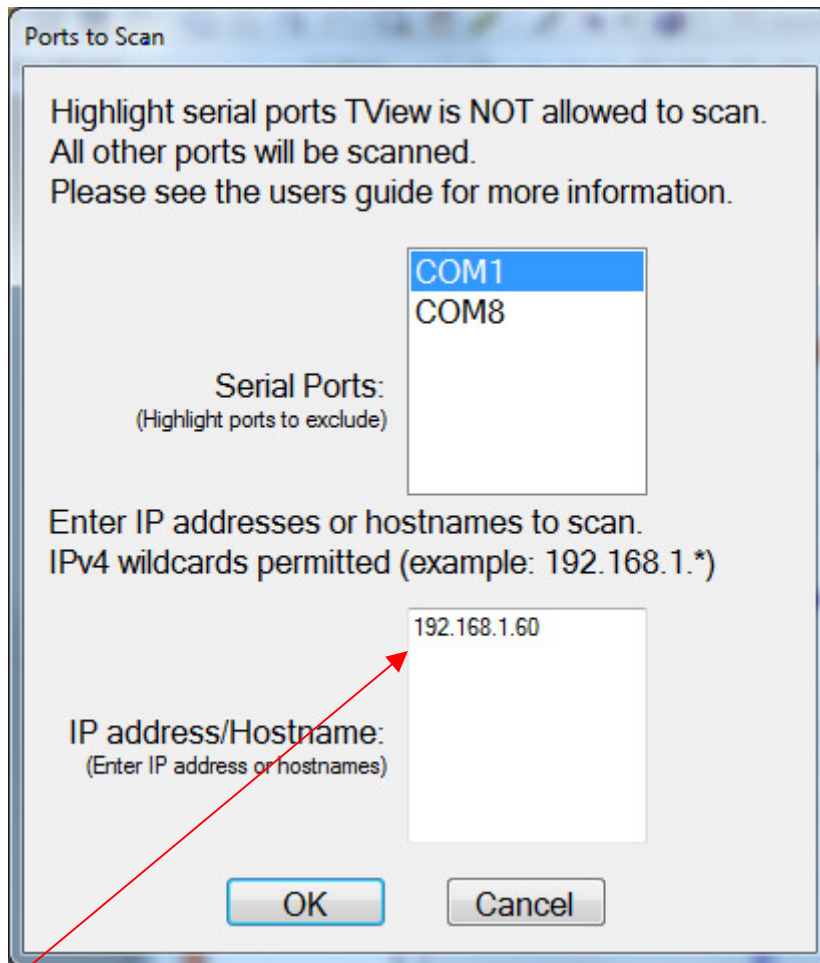

Type in the IP address of the TView and click 'OK'. After a few minutes the normal popup menu for naming a TV2 will be displayed so you can provide a name. Once that is completed TView knows where this TV2 is located and can download data from it.

Note: You can copy the data from the TV2 via the USB cable plugged into a PC **or** over the LAN, but these are mutually exclusive. You may not do both simultaneously.




Viewing the TV2 Clean Room Monitor over the Internet

To access the TV2 from outside the LAN a static IP address will need to be used and port forwarding setup by your IT department.

The TV2 will serve up a web page when accessed by a browser so the current conditions can be seen from anywhere with internet service. Your IT department will provide the IP address to access the web page below with a browser.

You will be able to view the information below but you can not make changes to the TV2 or go to the chart display remotely.

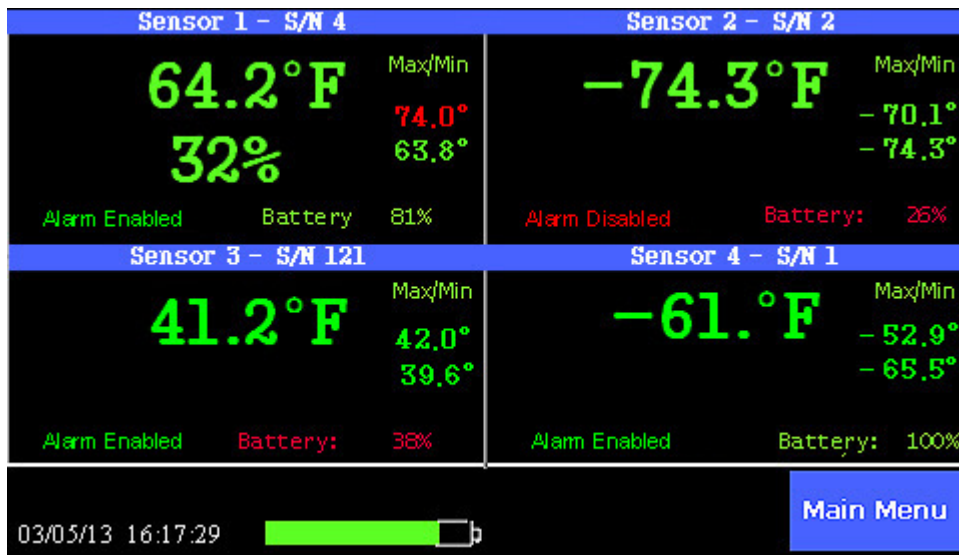

Notes:

1. If you are using the port forwarding technique to access the TV2 over the internet with a browser or to copy data with TView, only one TV2 can be accessed unless you have multiple modems with port forwarding set of different TV2s.
3. If you intend to access your TV2 from outside your local network, you will need to enable external access to your local network:

Note: Creating a 'hole' in your firewall will leave you vulnerable to possible attack.

1. If your local network has a router that assigns local IP addresses (i.e. 192.168.1.50 or 10.199.1.52), you must enable port forwarding to your TV2. You must forward port 80 (HTTP Port) to your TV2's IP address. Note that with this configuration, only one TV2 will be accessible outside your local network.